



FL46A-ENTREPRENØRDYKpumpe MED AUTOMATIK

BRUGSVEJLEDNING



Varenr. 01.210

VIGTIGT

Brugsvejledningen skal læses omhyggeligt igennem inden dette produkt tages i brug.

Du skal sikre dig, at du ved hvordan pumpen stoppes i tilfælde af uheld.

Uautoriseret brug kan afstedkomme alvorlige skader.

Opbevar vejledningen så den kan læses, hvis det bliver nødvendigt.



KORREKT BRUG

Pumpen er beregnet til grundvandssænkning ved udgravninger, tømning af oversvømmede kældre. En kraftig og robust pumpe med automatik.


Varenummer	01.210
Maks. liter pr. minut	260 ltr./min.
Maks. løftehøjde	11 m
Type	230 V
Vægt	11,5 kg
Motorstørrelse	450 W
Pumpehus materiale	Aluminium
Kobling	C - kobling
Vandtemperatur	Maks. 40 C°
Min. brønddiameter	Ø 400 mm
Slangetilslutning	2" slangestuds
Slangeafgang	Vendbar (lodret og vandret)
Flyder	Ja

SIKKERHEDSINSTRUKSER

Man må ikke bruge pumpen, hvis der er skader på pumpen, ledningen eller stikket. Sørg for at tilslutningen til el-nettet aldrig kommer i nærheden af vand.

BRUGSANVISNING

- > Tilslut en afgangslange.
- > Tilslut pumpen til el-nettet.
- > Vend afgangen ved at løsne de to bolte
- > Sæt afgangen på i modsat retning. Derved skåner du afgangsslangen som ikke bliver bøjet.

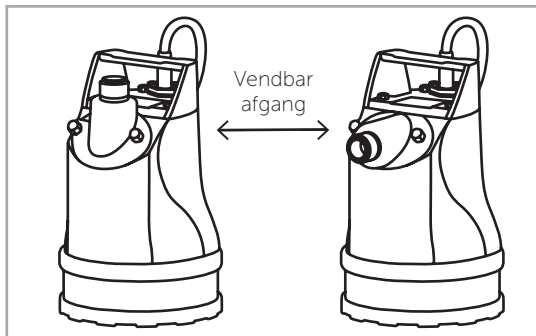



FL46A-CONSTRUCTION SUBMERSIBLE PUMP WITH FLOATER

INSTRUCTION



Item no.01.210

IMPORTANT

Please read the instruction manual carefully before using this product.
Make sure you understand how the pump stops in case of an accident.
Unauthorized use may cause serious damage.
Save the instructions for further reference.



CORRECT USE

The pump is designed for lowering groundwater levels during excavation work and emptying flooded basements. A powerful and robust pump with automatic control.

Item no.	01.210
Max. flow rate	260 ltr./min.
Max. head	11 m
Type	230 V
Weight	11,5 kg
Power	450 W
Outer material	Aluminium
Cloupling	C - coupling
Water temperature	Maks. 40 C°
Min. tank diameter	Ø 400 mm
Hose connection	2" connection
Hose outlet	Reversible (vertical and horizontal)
Floater	Yes

SAFETY INSTRUCTIONS

Never use the pump if it is damaged, or if the cable or plug are damaged.

Make sure that the electrical plug and socket connections never comes into contact with water.

USER INSTRUCTIONS

- › Connect to an outlet hose.
- › Connect the pump to a power supply.
- › Turn the outlet by loosening the two bolts
Attach the outlet in the opposite direction. This protects the outlet hose, which will not be bent.

